


TANDEM full extension with BLUMOTION – 560H

Web code
DQD1XA


Planning

Space requirement in cabinet

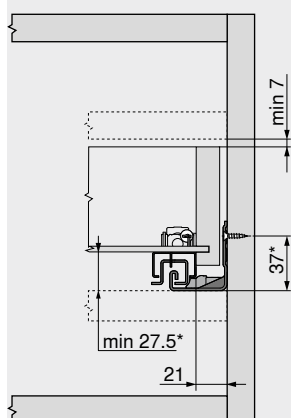


* +3 mm with side stabilisation


Drawer | inner drawer

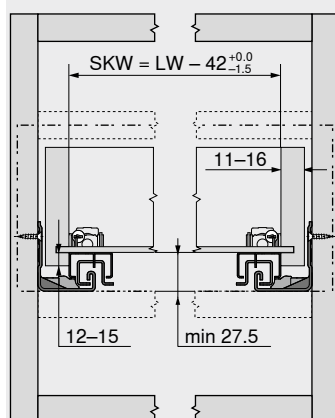
SKW Internal drawer width
LW Internal cabinet width

Drawer

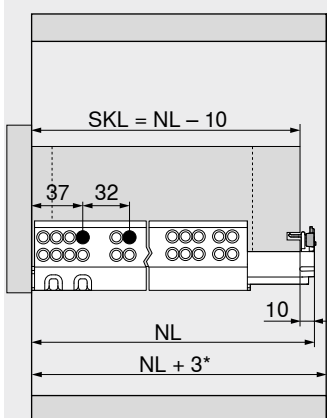
SKL Drawer length
NL Nominal length
* Additional +12 mm with side stabilisation

Inner drawer

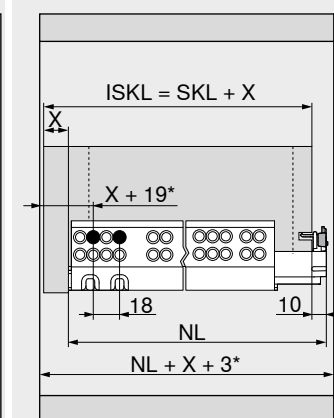
ISKL Inner drawer length
SKL Drawer length
NL Nominal length
X Front thickness
* Additional +2 mm with POSISTOP

Hole spacing – runners

Runner – 560H – 30 kg
Nominal length NL (mm)

250 | 270


300 | 320 | 350 | 380

400 | 420


450 | 480

500 | 520 | 550


600

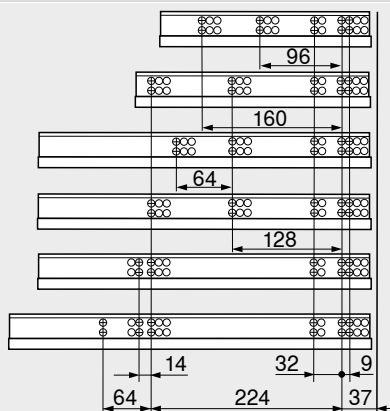

Drawer assembly

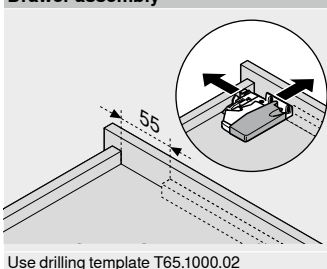

Use drilling template T65.1000.02

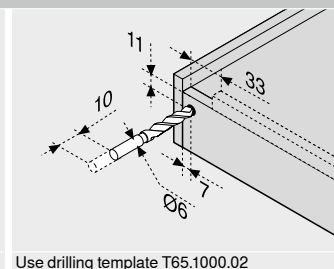

Use drilling template T65.1000.02

Reference pages

Overview	447	Assembly, removal and adjustment
SERVO-DRIVE for MOVENTO TANDEM	492	
CABLOXX	582	
Accessories	482	Short URL
Attachment of runners	490	www.blum.com/a420
E-SERVICES and assembly devices	590	
More technical details	698	

